

# Caller ID (MFC-3360C) (For U.K. and Ireland only)

The Caller ID feature lets you use the Caller ID subscriber service offered by many local telephone companies. Call your telephone company for details. This service shows the telephone number, or name if it is available, of your caller as the line rings.

Download and install the latest firmware to add support for Caller ID subscriber services to your machine.

## How to use

After a few rings, the LCD shows the telephone number of your caller (and name, if available). Once you answer a call, the Caller ID information disappears from the LCD, but the call information stays stored in the Caller ID memory.

- You can see the first 16 characters of the number (or name).
- The # *Unavailable* message means the call originated outside your Caller ID service area.
- The # *Withheld* message means the caller has intentionally blocked transmission of information.

 
You can print a list of the Caller ID information received by your machine. (See *Printing Caller ID List* on page 2.)



### Note

Caller ID service varies with different carriers. Call your local telephone company to find out about the kind of service available in your area.

## Setting the Caller ID to ON

- 1 Press **Menu, 2, 0, 4**.  

- 2 Press **▲** or **▼** to choose *On* (or *Off*). Press **OK**.
- 3 Press **Stop/Exit**.

## Viewing Caller ID List

If Caller ID is set to On, your machine stores information for the last thirty calls in the Caller ID list. You can view or print this list. When the thirty-first call comes in to the machine, it replaces information about the first call.

- 1 Press **Menu, 2, 0, 4**.
- 2 Press **▲** or **▼** to choose *Display ID*. Press **OK**.  
The Caller ID list will appear on the display. If no ID is stored, the beeper will sound and *No Caller ID* will appear on the display.
- 3 Press **▲** or **▼** to scroll through the Caller ID memory to choose the Caller ID you want to view, and then press **OK**.  
The LCD shows the caller's number or name and the date and time of the call.
- 4 Do one of the following:
  - To return to the Caller ID listing, press **◀**.
  - To finish viewing, press **Stop/Exit**.

## Printing Caller ID List

---

- 1 Press **Menu, 2, 0, 4**.
- 2 Press **▲** or **▼** to choose `Print Report`. Press **OK**.  
If no ID is stored, the beeper will sound and `No Caller ID` will appear on the LCD.
- 3 Press **Mono Start** or **Colour Start**.
- 4 After printing has finished, press **Stop/Exit**.